

## USING THE H&G ALL-WEATHER ANCHOR CHAIN

The **H&G ALL-WEATHER ANCHOR CHAIN** is designed to replace the standard bungee cord when anchoring the tripod. It provides a weather resistant anchor with greater tensile strength than the bungee cord can provide. It is an ideal anchor solution for the full-time RVer.

The **ALL-WEATHER ANCHOR CHAIN** kit contains 24" of 12 gauge zinc plated chain with an S hook at one end and a 3/16" X 5 1/2" zinc plated turnbuckle.

Prepare the turnbuckle by unscrewing each threaded section, leaving approximately 1" of thread exposed. Note that the hook on the bottom has left-hand threads and must be unscrewed in the opposite direction as the top hook. (See photo to the right).

Attach the turnbuckle to the eye-bolt to the anchor hook of the tripod.

Wrap the S hook end of the anchor chain around the anchor device, several times if possible, and secure the S hook to the chain.

Hold the chain, tightly stretched, next to the lower hook of the turnbuckle and select the chain link that is closest to the opening of the hook. Slip that link onto the hook.

Turn the center body of the turnbuckle to the right to tighten the chain and secure the tripod. Do not attempt to lift a weighted anchor device off the ground with the chain. The weight should remain on the ground with the chain as tight as possible.

When completed, the setup should look similar to the photo on the right.

